

853
Lawrence Drive
Newbury Park, California
91320-2232 U.S.A.
Vox: 805.499.5000
Fax: 805.499.5888
www.cybertouch.com
sales@cybertouch.com

Recovery From A Failed TouchKit Installation

Note: The USB cable must be connected while performing the following steps.

1. Open Device Manager
START => CONTROL PANEL => SYSTEM HARDWARE =>
DEVICE MANAGER
2. Expand the 'Mice and other pointing devices' section.
3. Delete the 'TouchKit Touchcontrol' entry.
4. Right click on the 'Touch screen.....(Universal Driver)' entry and select Update.
5. Select 'Install from a list or specific location'.
6. Browse to the TouchKit/Windows 2KXP (ME 98 etc.) directory on the harddrive or on the supplied CD.
7. Select OK and the touch screen driver will be updated to the proper TouchKit driver.
8. Close all open windows.
9. Bring up the TouchKit utility and complete all necessary setting adjustments and calibration.

